


SEDOR® ANPR Server: NTP Time Server Synchronization

Synchronization to an external time server with the application “NTP Time Server Monitor”

A SEDOR® ANPR server can be synchronized to an external time server. The application (**NTP Time Server Monitor**) required for this purpose is installed on the appliance.

In order to synchronize a SEDOR® ANPR system with an external time server proceed as follows:

- Start the **NTP Time Server Monitor** application.
- Select the **NTP Configuration File** tab.

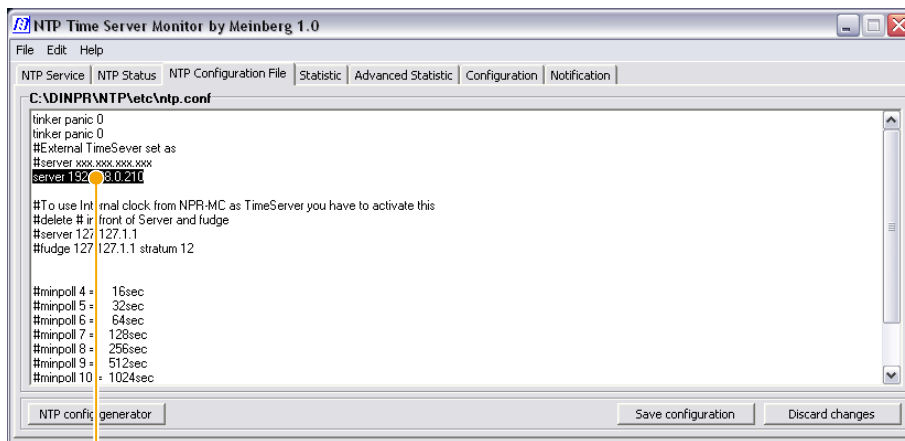


Input time server

- Enter the IP address of the external time server as displayed in the figure above. Format: “server” space “IP address” = **server xxx.xxx.xxx.xxx**
- Click **Save configuration**.

The time server is entered.

On the tab **NTP Status** tab can be checked whether the external time server can be reached. If the time server is available, the entry is marked in green.

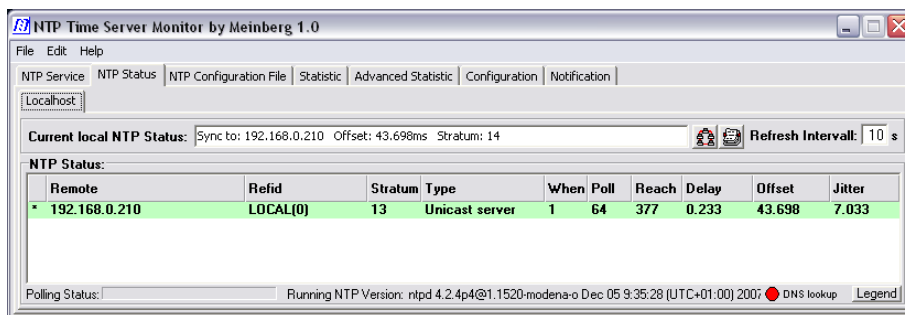

The SEDOR® ANPR server automatically synchronizes the provided time of the external time server. No further adjustments are required.

If the external time server is unavailable, the local time of the operating system is used for synchronization.

For more information about the “NTP Time Server Monitor” application and download the application, see www.meinberg.de